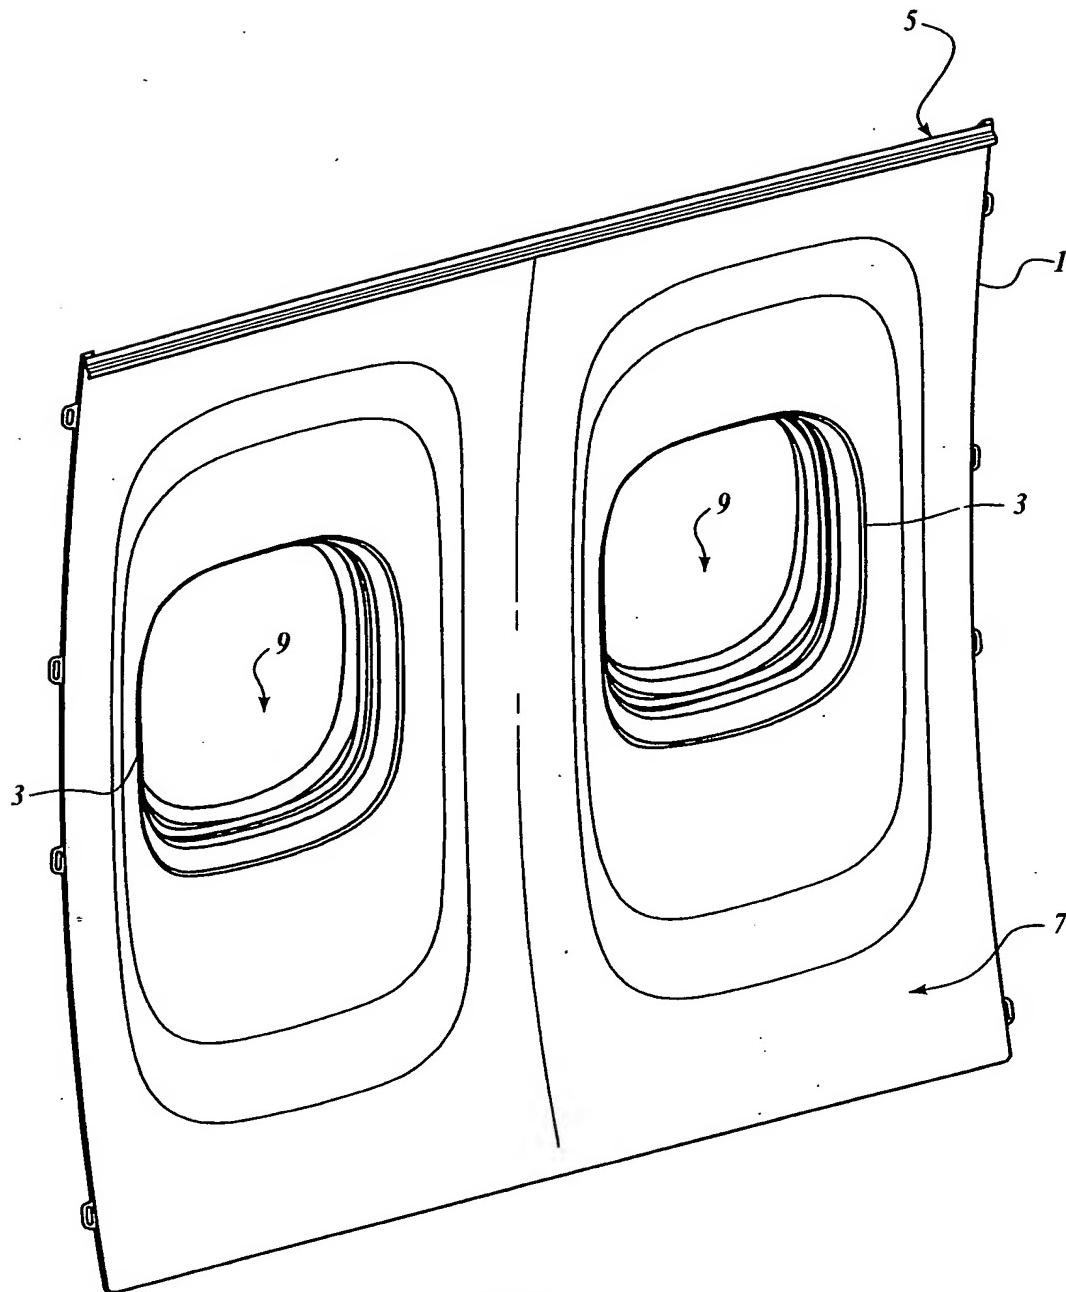


GARY E. JONES  
Attorney Docket No. BOEI-I-1011  
**SNAP-IN WINDOW ASSEMBLY AND METHOD**  
Filed: October 25, 2001  
Serial No. 10/047,186  
Sheet 1 of 6  
Black Lowe & Graham, PLLC  
(206) 381-3300

1/6

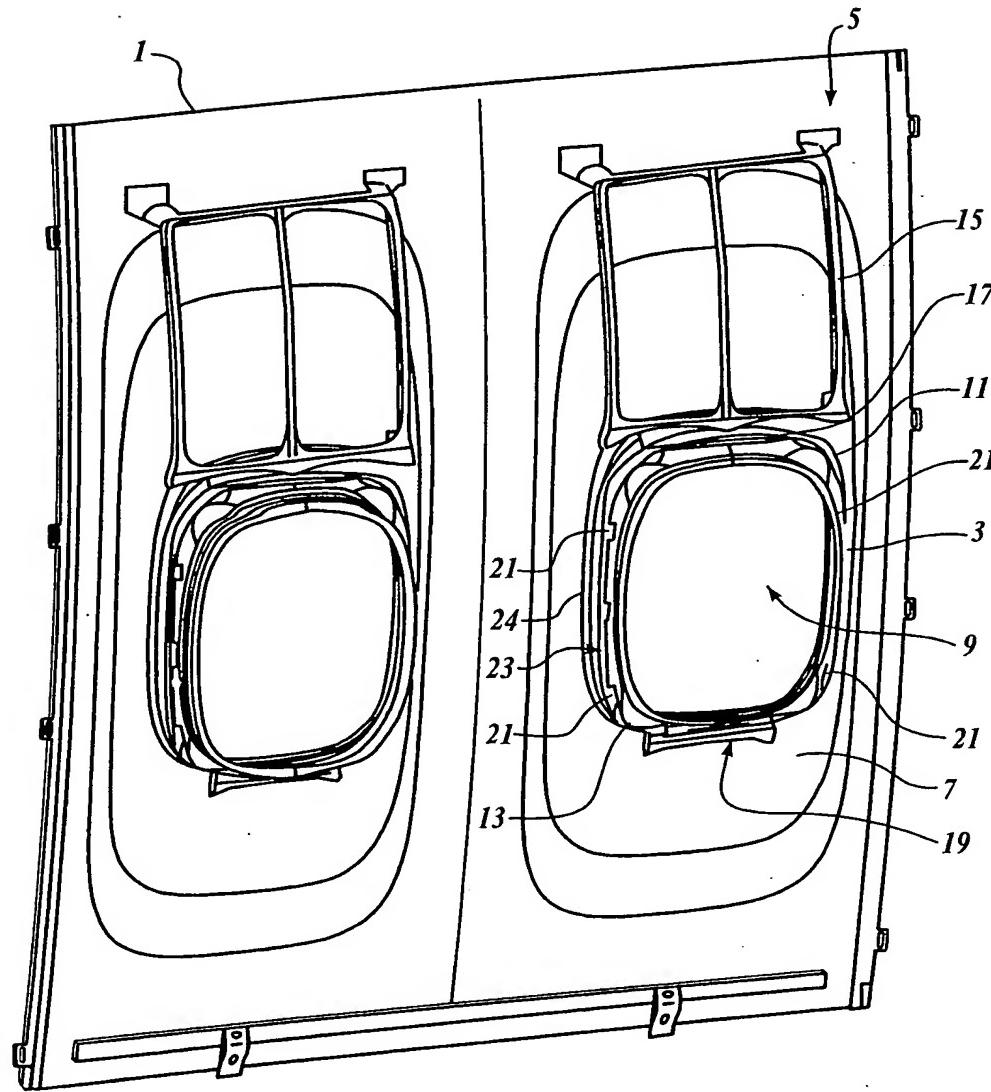


*Fig. 1.*




GARY E. JONES  
Attorney Docket No. BOEI-1-1011  
**SNAP-IN WINDOW ASSEMBLY AND METHOD**  
Filed: October 25, 2001  
Serial No. 10/047,186  
Sheet 2 of 6  
Black Lowe & Graham, PLLC  
(206) 381-3300

2/6



*Fig. 2.*

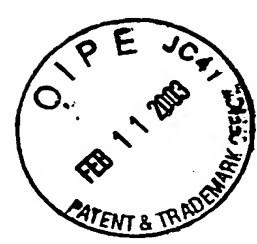

GARY E. JONES  
Attorney Docket No. BOEI-1-1011  
SNAP-IN WINDOW ASSEMBLY AND METHOD  
Filed: October 25, 2001  
Serial No. 10/047,186  
Sheet 3 of 6  
Black Lowe & Graham, PLLC  
(206) 381-3300

3/6


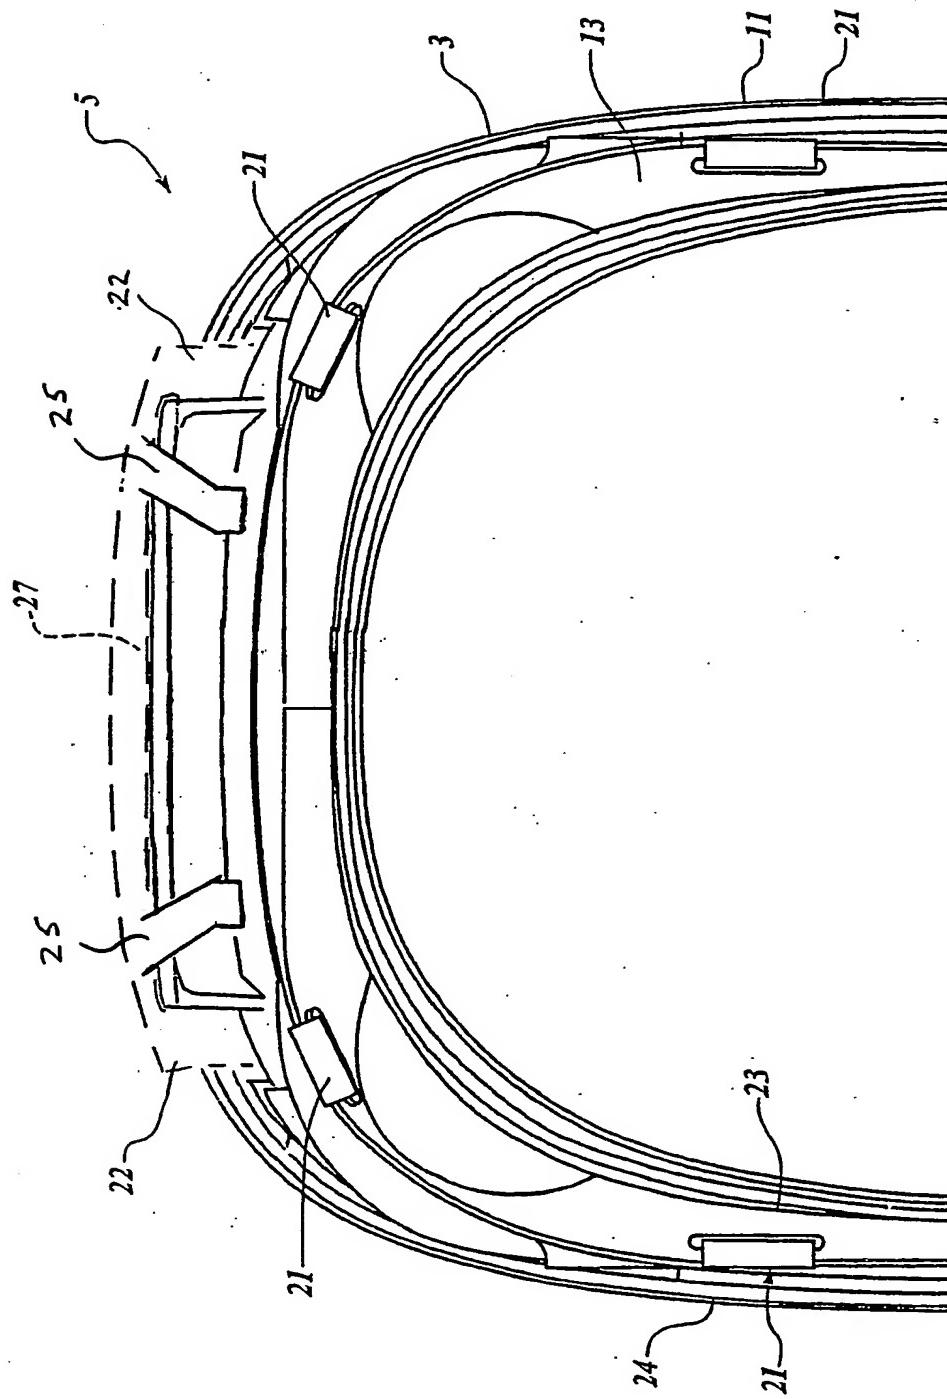


Fig. 3.

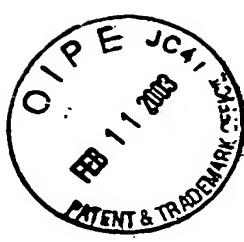

GARY E. JONES  
Attorney Docket No. BOEI-I-1011  
SNAP-IN WINDOW ASSEMBLY AND METHOD  
Filed: October 25, 2001  
Serial No. 10/047,186  
Sheet 4 of 6  
Black Lowe & Graham, PLLC  
(206) 381-3300

4/6


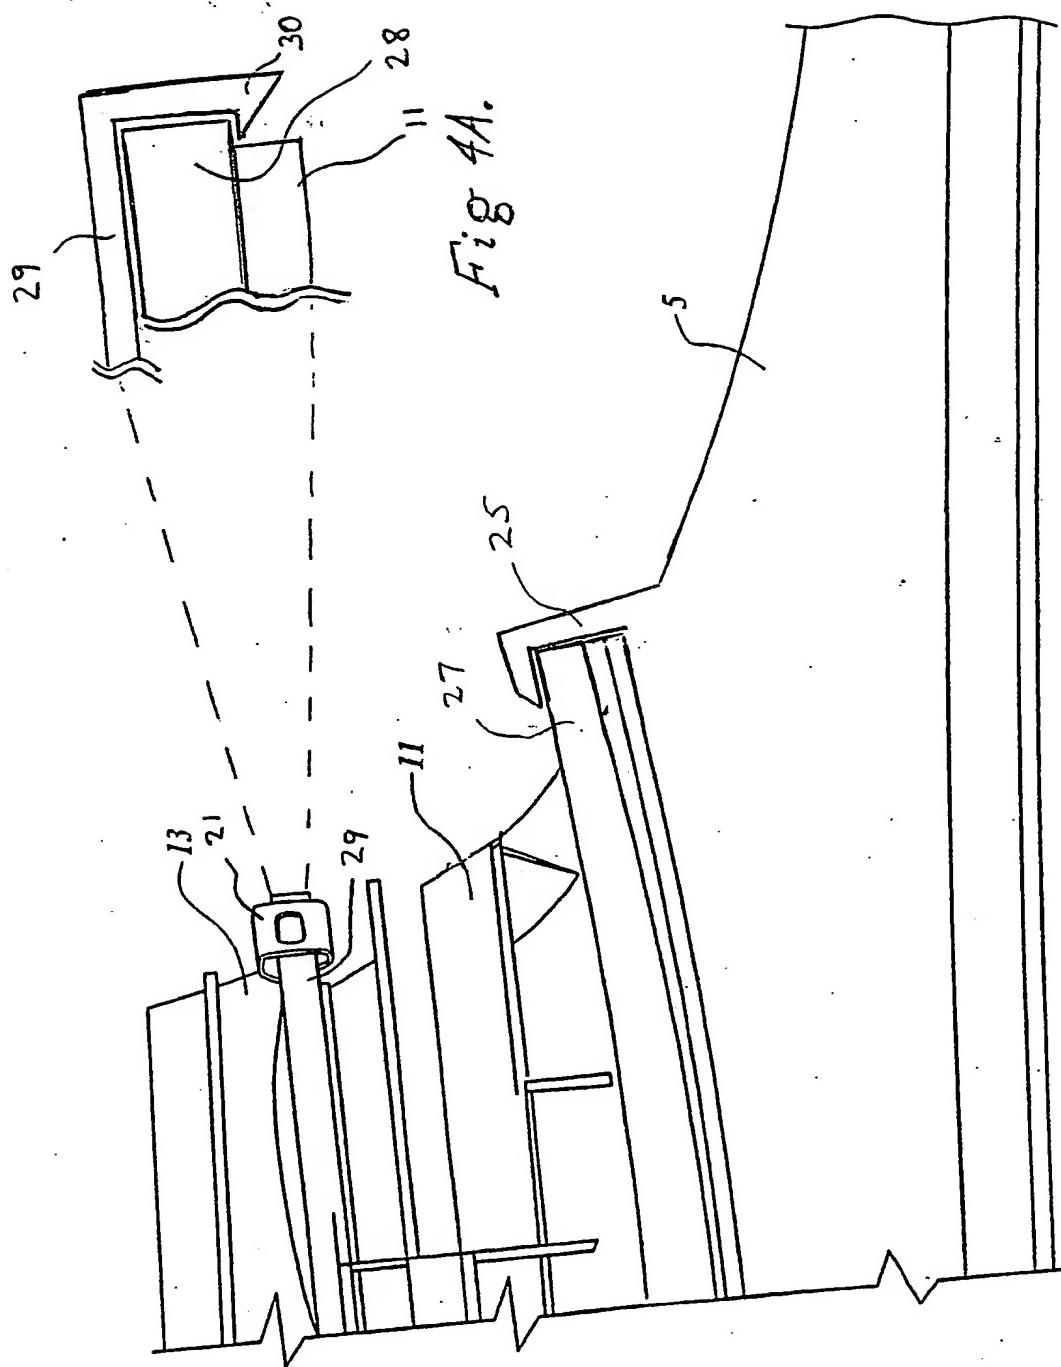


Fig. 4.

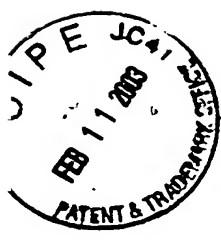

GARY E. JONES  
Attorney Docket No. BOEI-1-1011  
SNAP-IN WINDOW ASSEMBLY AND METHOD  
Filed: October 25, 2001  
Serial No. 10/047,186  
Sheet 5 of 6  
Black Lowe & Graham, PLLC  
(206) 381-3300

5/6



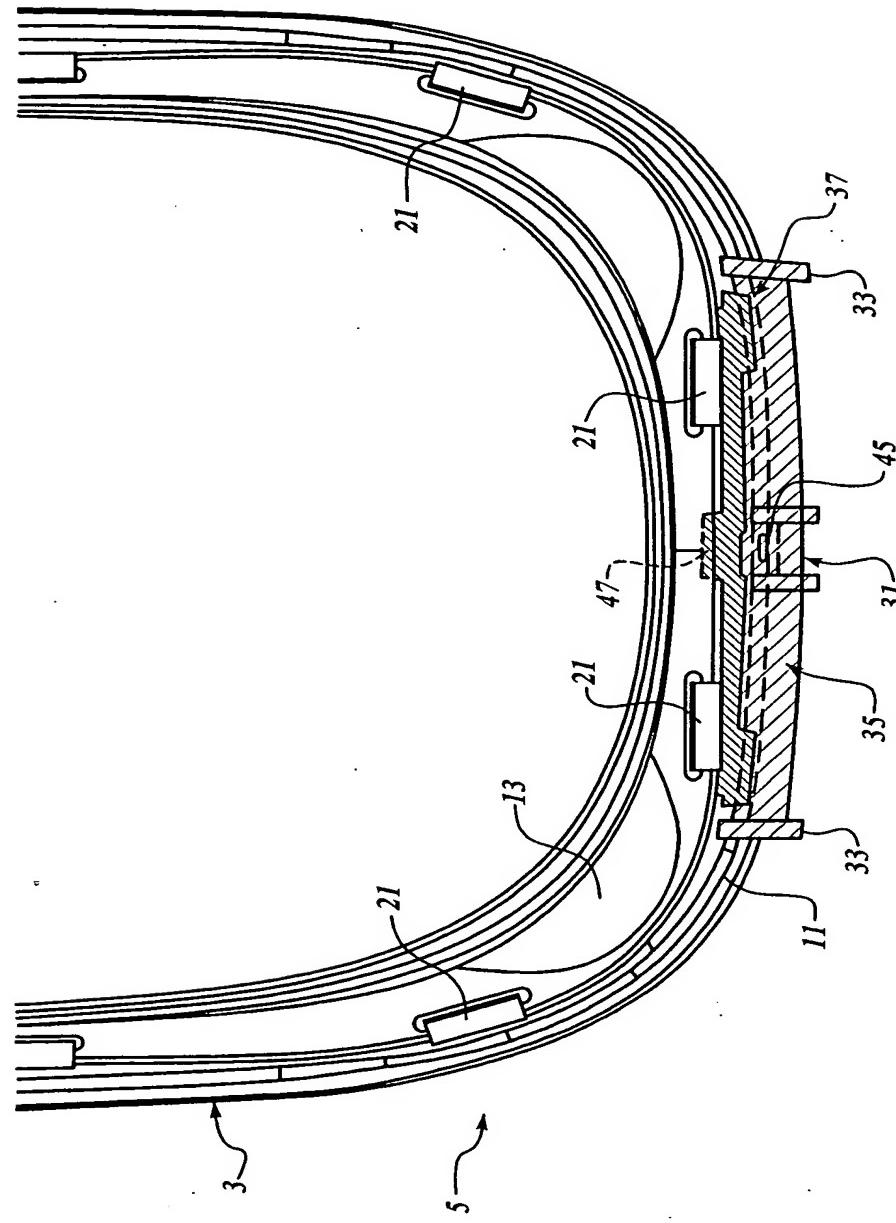


Fig. 5.

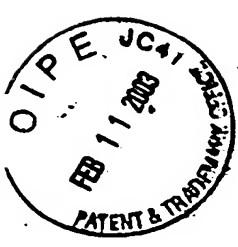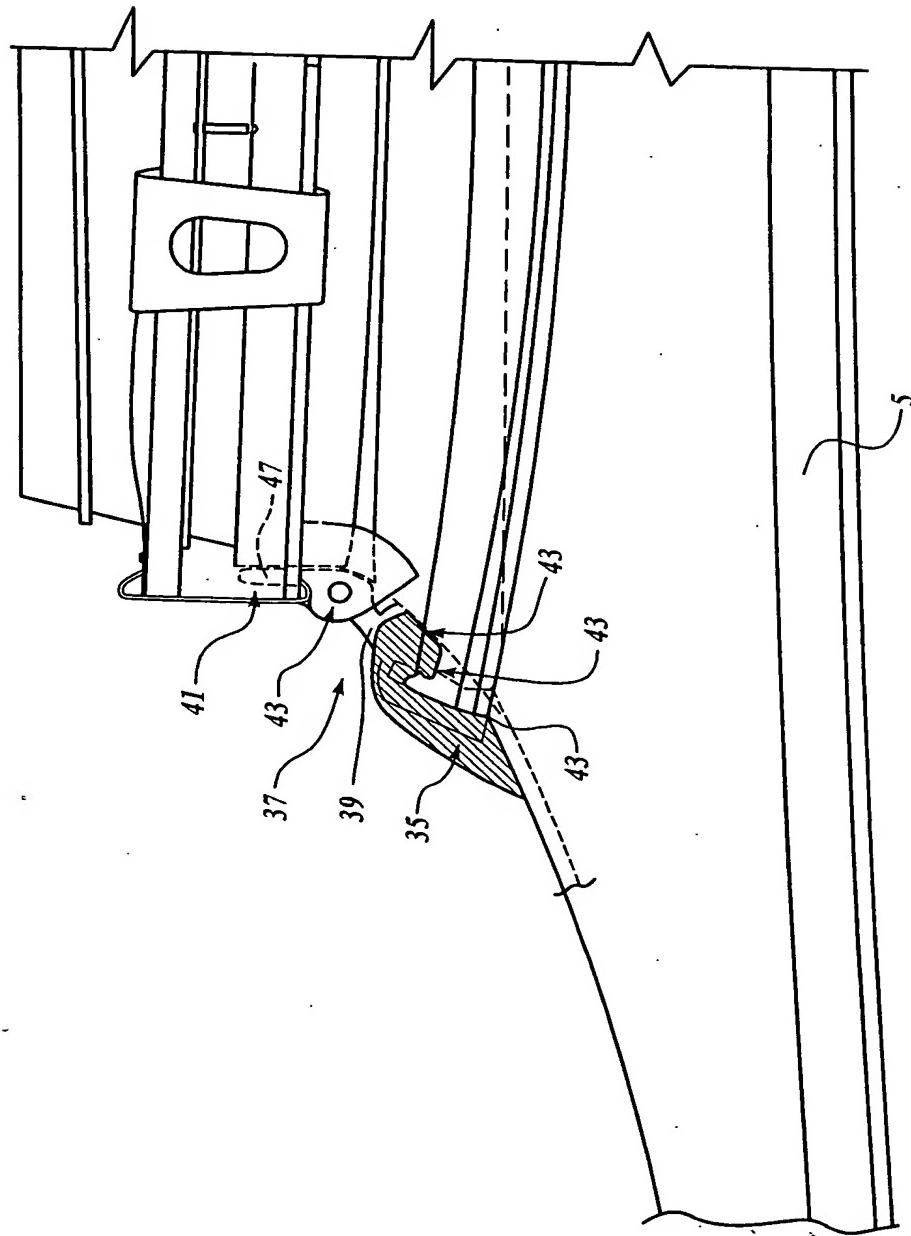

GARY E. JONES  
Attorney Docket No. BOE1-1-1011  
**SNAP-IN WINDOW ASSEMBLY AND METHOD**  
Filed: October 25, 2001  
Serial No. 10/047,186  
Sheet 6 of 6  
Black Lowe & Graham, PLLC  
(206) 381-3300

6/6



*Fig. 6.*